

airpixel.cz



**AIR
Commander**

BY **AIRPIXEL**

CCAPI Canon Cameras
USER'S MANUAL

Before using this product, carefully read all product documentation and retain it for future reference.

Camera control & Connection



Newest Canon cameras supports CCAPI (Camera Control API). This API is implemented different way in the Entire to keep connection more stable and more user friendly.

CCAPI needs to be enabled in your camera via Canon's USB tool. This process is done only once and is supplied by Canon, no need to be worried about camera warranty or support.

1) Download Canon's USB tool and activate CCAPI in your camera:








- http://share.airpixel.cz/CCAPI_Activation_Tool.zip
- Connect camera via USB to your PC or MAC
- Turn the camera ON
- Launch application tool
- Click to Execute
- If you have any problem, check PDF manual from Canon included in the ZIP file.

2) Open Entire's MENU and set the Entire to WiFi mode

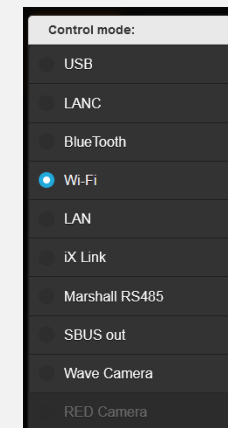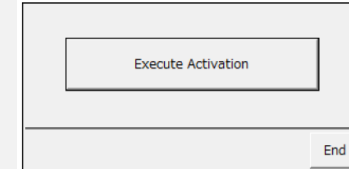

3) Connect the Entire & Camera for remote control

- Open Camera MENU, list Network
- Set Wi-Fi settings to ENABLE and enter submenu
- Scroll down to Camera Control API and enter
- Scroll to Add connection and enter
- Click to Add with wizard
- In the list of available WiFi hotspots select your Entire
- Select Manual settings
- Enter manual IP 192.168.10.88
- Confirm connection
- Entire will initialize connection automatically

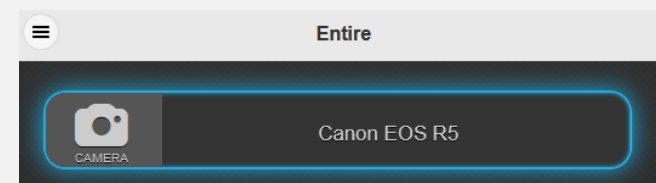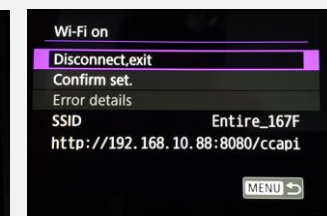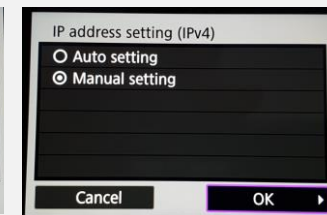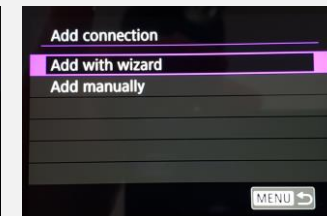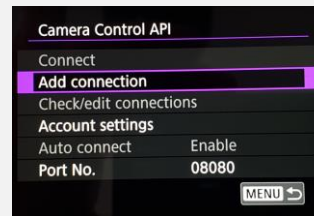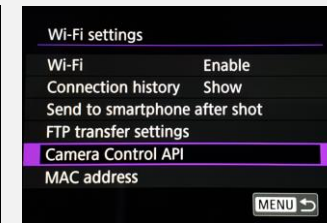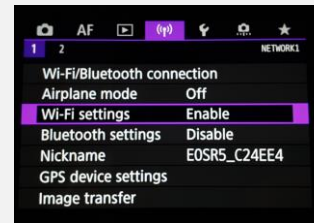

Warranty

All warranty and post-warranty service provides manufacturer at www.airpixel.cz. If any malfunction or non-usual behavior occur, stop using device and contact manufacturer at info@airpixel.cz.

Manufacturer

AIRPIXEL.CZ

Na výsluní 25
Prague 10
100 00
Czech Republic

Made in Czech Republic