

airpixel.cz

AIR Commander
ENTIRE

Fuji GFX Cameras

 
 
USER'S MANUAL

Before using this product, carefully read all product documentation and retain it for future reference.

Configure camera



At first configure camera for remote control.

- 1) Navigate in camera menu to -
 - Settings -> PC CONNECTION MODE -> USB TETHER SHOOTING AUTO
- 2) Configure camera to MANUAL exposure mode
 - Move lens ring to C mode

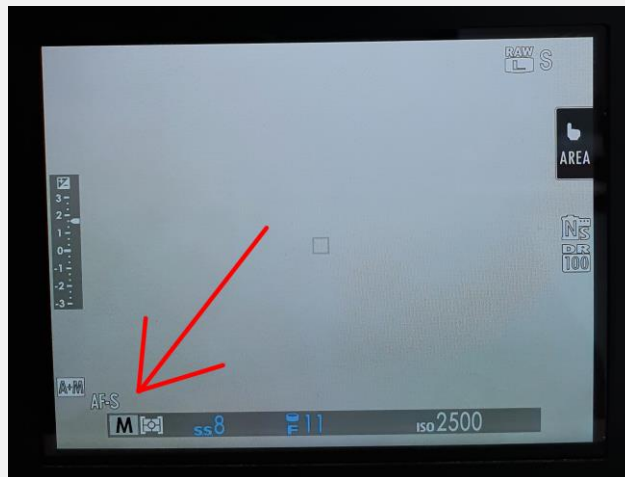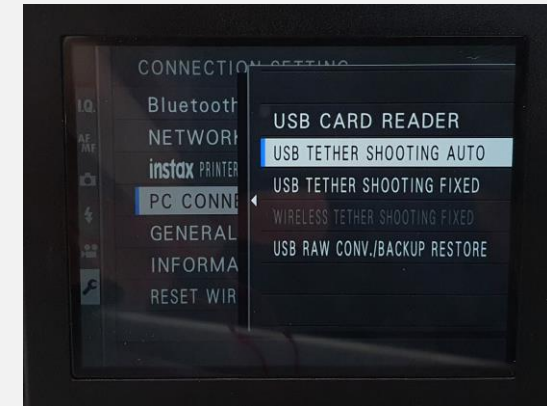

Entire configuration

  - 1) Connect to the Entire's web page
- 2) Navigate to MENU -> Control mode -> select USB mode
- 3) Navigate to MENU -> Miscellaneous
 - Enable Don't reconnect USB after photo
- 4) Navigate to MENU -> Miscellaneous -> FUJI Options
 - Enable Use HW Photo trigger



Control Behavior –important!

Entire is using PC tether features for camera control. Camera refuses all USB connection when writing to SD card. That is the reason, why reconnecting after photo trigger takes very long (Entire must wait for file saving process). When function of "USE HW photo trigger" is enabled, the Entire will not re-enable USB connection after each photo trigger and you are free to trigger photos quickly. However, once you would like to change any exposure parameter, USB connection will be re-enabled automatically, and will be successful once all SD card operations will be done by the Camera. Fast SD card is a must for user friendly handling of GFX series camera.

Warranty

All warranty and post-warranty service provides manufacturer at www.airpixel.cz. If any malfunction or non-usual behavior occur, stop using device and contact manufacturer at info@airpixel.cz.

Manufacturer

AIRPIXEL.CZ

Ing. Ilja Mašík Ph.D.

Na výsluní 25

Prague 10

100 00

Czech Republic

Made in Czech Republic