

**airpixel.cz**

**AIR Commander**  
***ENTIRE***

PhaseOne Industrial

**USER'S MANUAL**

Before using this product, carefully read all product documentation and retain it for future reference.

## Connection

Thanks for choosing Entire for Phase One camera control! Connection is very easy and takes just few minutes.


### Entire configuration and connection:

1. Open the Entire's menu, select "Control mode" and switch to "iX Link"
2. Connect the PhaseOne adaptor board by 3pin cable to EXT port of the Entire
3. Connect the PhaseOne adaptor board by 6pin cable to PORTMULTI of the Entire (blue LED will turn ON)

### Camera configuration and connection:

1. Connect the Camera to iX Capture software provided by PhaseOne
2. Configure LEFT TERMINAL type as GPS, baudrate as 115200
3. Configure GPS RECEIVER as NMEA Device
4. Configure RIGHT TERMINAL type as iX Link
5. Connect the "Control" LEMO connector to the Right terminal
6. Connect the "GPS" LEMO connector to the Left terminal

Once camera is properly connected, the Entire will light STATUS LED green and highlight the PhaseOne camera at the overview page.

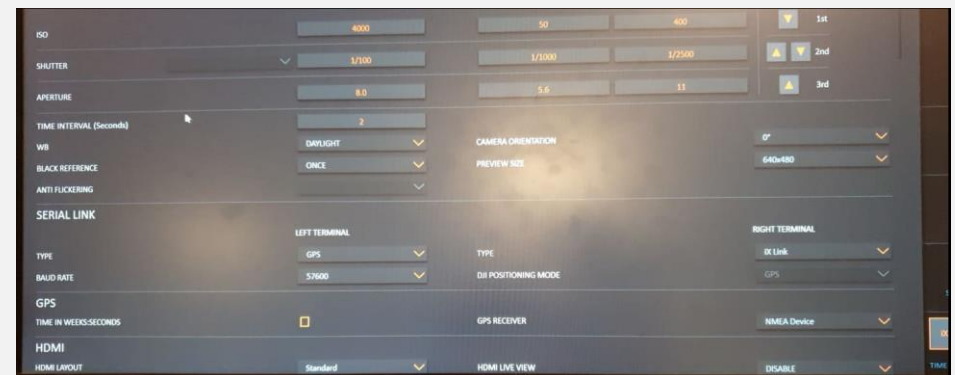

## Warranty

All warranty and post-warranty service provides manufacturer at [www.airpixel.cz](http://www.airpixel.cz). If any malfunction or non-usual behavior occur, stop using device and contact manufacturer at [info@airpixel.cz](mailto:info@airpixel.cz).

## Manufacturer

### AIRPIXEL.CZ

Ing. Ilja Mašík Ph.D.

Na výsluní 25

Prague 10

100 00

Czech Republic

Made in Czech Republic