

airpixel.cz

AIR Commander
ENTIRE

Marshall Control

USER'S MANUAL

Before using this product, carefully read all product documentation and retain it for future reference.

Connection

Thanks for choosing Entire for Marshall camera control! Connection is very easy and takes just few minutes.

Entire configuration and connection:

1. Open the Entire's menu, select "Control mode" and switch to "Marshall RS485"
2. Connect the Marshall control cable by 3pin cable to EXT port of the Entire
3. Connect the Marshall control cable by 6pin cable to PORTMULTI of the Entire

Camera configuration and connection:

1. Connect the Marshall control cable to the RS485 interface (direct cable to+, cable interrupted by virtual ground unit is -)
2. Check camera configuration for (via MENU):
 - a. RS485 control enabled
 - b. RS485 baudrate 9600

Because the camera has no backward communication, the Entire is highlighting camera connection as "online" by default and has no relation to actual camera connection.

Issues

If control does not work, or works inconsistently, please check the camera connection in the RS485 terminal. Bad contact at this connection is most frequented problem.

Warranty

All warranty and post-warranty service provides manufacturer at www.airpixel.cz. If any malfunction or non-usual behavior occur, stop using device and contact manufacturer at info@airpixel.cz.

Manufacturer

AIRPIXEL.CZ

Ing. Ilja Mašík Ph.D.

Na výsluní 25

Prague 10

100 00

Czech Republic

Made in Czech Republic